



Dyn-O-Mate Corner Installation Instructions using the Crimper Tool

Follow these instructions for each TDC/TDF Corner being installed.

STEP-1

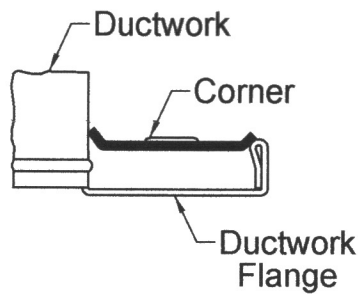



View-A

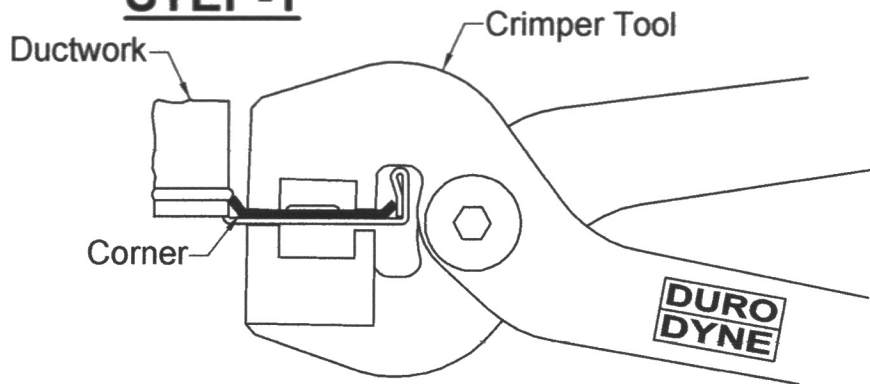


View-B

Place the **Corner** as shown in **View-A** and snap it into the **Ductwork Flange** using the **Crimper Tool** as shown in **View-B**.

STEP-2

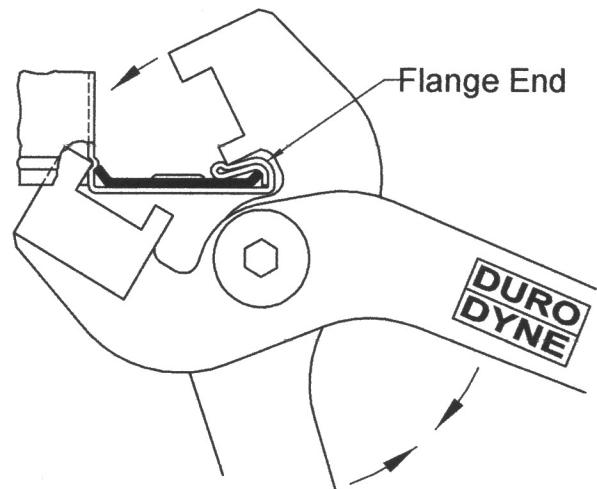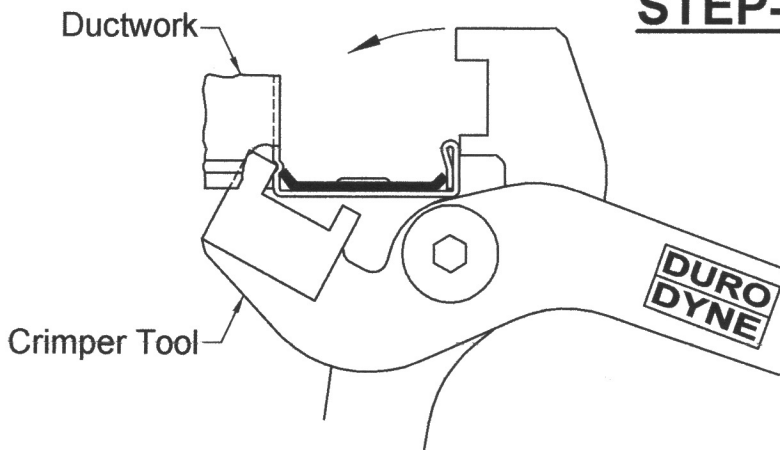

Placing the **Crimper Tool** as shown, compress the handles to bend over the **Flange End**. See **Top View** (below) for the proper placement of the **Crimper Tool**.

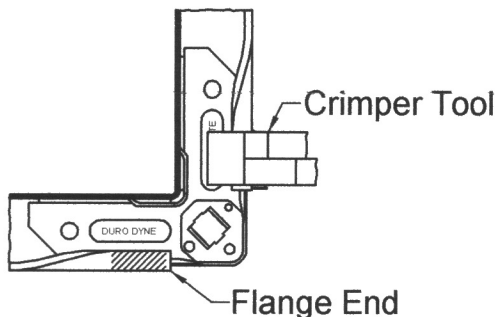

Top View

(No Scale)

Place the **Crimper Tool** towards the end of the **Flange End** as shown.

(For further assistance, please contact Duro Dyne Corporation)

THE GREATEST NAME IN SHEET METAL NECESSITIES

Duro Dyne East

Bay Shore, NY 11706
Ph: 631-249-9000
Fax: 631-249-8346

Duro Dyne Midwest

Fairfield, OH 45011
Ph: 513-870-6000
Fax: 513-870-6005

Duro Dyne West

Santa Fe Springs, CA 90670
Ph: 562-926-1774
Fax: 562-926-5778

Duro Dyne Canada

Lachine, Quebec, Canada H8T1B3
Ph: 514-422-9760
Fax: 514-636-0328

12-08
© 2008 Duro Dyne Corp.
Printed in USA 12/08